



Lenovo Thinkpad X220 Battery Replacement

This guide shows you how to replace the battery in your Lenovo X220.

Written By: Nils Eymer



Step 1 — Battery



- Locate the two switches that lock the battery.
- Then push the left switch outward into the "unlocked" position.

Step 2



- Now push and hold the right switch to the right while using the other hand to gently slide the battery upwards out of the laptop.

Step 3



- You need a rechargeable Li-Ion battery that has a capacity of 4400 mAh.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:03:28 AM.